

## TRULUX™ Tunable CCT Controllers

For color temperature control at the turn of a dial, use our Trulux Tunable CCT controllers for fast and accurate adjustments from 2700K to 6000K. Transform the look and feel of a room with this dynamic, customizable system. (Trulux Tunable CCT controller and receiver required for operation)



**TWRP-BATT**

**Tunable Push Dial Wall Control**  
(Single Zone)

- Push dial On/Off control dimmer
- Double push dial for color temperature selection (2700K-6000K)
- Glass faceplate with satin nickel dial
- Wireless installation - No power wire
- Pair multiple receivers to a single control
- RF signal (up to 65 feet)
- Battery powered (CR2032)
- Requires Trulux receiver for install



**TWRP-4Z (RF version)**  
**DMX-TW-4Z (DMX version)**

**Tunable Touch Slide Wall Control**  
(4 Zones / 2 Scenes)

- Touch On/Off control
- Touch slide control provides full range dimming and temperature selection (2700K-6000K)
- Glass faceplate with back-lit buttons
- 2 programmable scenes
- 4 dedicated zone selection
- Pair multiple receivers to a single control
- RF signal (up to 65 feet)
- Requires 12V-24V DC input power wire and Trulux receiver for install
- DMX version requires DMX receiver for operation



**TWRP-3AAA**

**Tunable CCT Remote**  
(4 Zones / 3 Scenes)

- Ultra sensitive color adjustment wheel for 2700K-6000K selection
- 3 programmable scenes
- 4 dedicated zone selection
- 4 preset intensity settings
- Includes convenient wall caddy
- Pair multiple receivers to a single control
- RF signal (up to 65 feet)
- Battery powered (3 x AAA)
- Requires Trulux receiver for install



### Trulux Tunable CCT Set-up



**Push Dial Controller**  
(Single zone)

+



**Adaptive LED Driver**  
(30W / 60W / 96W / 192W / 288W)

+



**Trulux RF Receiver**  
(Required)

+



**Trulux Tape Light**

# TRULUX™ Tunable CCT Accessories

Building a Trulux system is easy! Our Trulux Tunable CCT controllers feature wireless technology that makes installation a breeze. All that's required is a 120V power source to a 12V power supply which is then fed to a Trulux receiver. Wire your tape to the receiver, sync the receiver to the controller, and you're all set.

## TUNABLE SINGLE ZONE



**Tunable Push Dial**  
Wireless RF Wall Controller

**TWRF-BATT**



Adaptive 24V Drivers

- ADPT-DRJ-30-24** (30W)
- ADPT-DRJ-60-24** (60W)
- ADPT-DRJ-96-24** (96W)
- ADPT-DRJ-192-24** (192W)
- ADPT-DRJ-288-24** (288W)



**Trulux RF Receiver**  
(Required per zone)

**REC-5A-4Z**

## TUNABLE 4 ZONE



**4 Zone Touch Slide**  
RF Wall Controller

**TWRF-4Z**



Adaptive 24V Drivers

- ADPT-DRJ-30-24** (30W)
- ADPT-DRJ-60-24** (60W)
- ADPT-DRJ-96-24** (96W)
- ADPT-DRJ-192-24** (192W)
- ADPT-DRJ-288-24** (288W)



**Trulux RF Receiver**  
(Required per zone)

**REC-5A-4Z**

## TUNABLE DMX 4 ZONE



**4 Zone Touch Slide**  
DMX Wall Controller

**DMX-TW-4Z**



Adaptive 24V Drivers

- ADPT-DRJ-30-24** (30W)
- ADPT-DRJ-60-24** (60W)
- ADPT-DRJ-96-24** (96W)
- ADPT-DRJ-192-24** (192W)
- ADPT-DRJ-288-24** (288W)



**Trulux DMX Receiver**  
(Required per zone)

**REC-DMX-5A-4Z**

## TUNABLE 4 ZONE



**Tunable Remote**  
RF Remote Control

**TWRF-3AAA**



Adaptive 24V Drivers

- ADPT-DRJ-30-24** (30W)
- ADPT-DRJ-60-24** (60W)
- ADPT-DRJ-96-24** (96W)
- ADPT-DRJ-192-24** (192W)
- ADPT-DRJ-288-24** (288W)



**Trulux RF Receiver**  
(Required per zone)

**REC-5A-4Z**

TASK LIGHTING

DOWNLIGHTING

LINEAR LIGHTING

ARCHITECTURAL LIGHTING

POWER SUPPLIES

## Trulux Tunable CCT Accessories



**HD Power Feed (IP54)**

**TL-4PWR-HD**



**HD Splice (IP54)**

**TL-4SPL-HD**



**HD Linking Cable (IP54)**

**TL-4JUMP6-HD** (6")  
**TL-4JUMP24-HD** (24")