

INSTALLATION INSTRUCTIONS

FPL-12V-3CCT-BK



⚠ WARNING

These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with these instructions, current electrical codes, and/or the current National Electric Code (NEC).

⚠ WARNING

This product requires a 12V DC power input. Confirm source voltage prior to installation and use appropriate 12V DC driver. Disconnect supply power at the source prior to attempting installation.

SAFETY INFORMATION

- Read all instructions before beginning; Save these instructions for future use.
- To reduce the risk of fire, electric shock, or injury to persons, pay close attention to this manual and stay within its guidelines when using this product.
- If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.
- There are no serviceable parts inside this fixture. Do not attempt to dismantle or service this fixture in any way.
- LEDs are not serviceable. Do not attempt to open the LED light engine.
- LEDs are bright. Do not look directly into fixture.
- Not intended for recess mounting in any type of installation.
- If protective lens cover is broken, the fixture must be replaced. Do not use without a protective cover.

INSTALLATION (SEE FIGURE 1):

This fixture requires a 12V DC power source. Disconnect power at the source fuse or circuit breaker box before attempting installation. Double-check all connections to be sure they are tight and correct.

1. Turn off power at the source prior to attempting installation.
2. Connect wires from fixture to appropriately rated LED driver, being sure to match polarity. The extension arm may be used as a wire chase. Ensure all connections are shielded (either sealed or within an enclosure) to prevent exposure to the elements.
3. The fixture head, extension arm, and mounting stake all have matching threaded ends. To attach extension arm, screw threaded end to the fixture head by turning clockwise until fully seated. To attached mounting stake, follow the same procedure.
4. Adjust the angle of fixture head for best illumination. Tighten hex screw on adjustable knuckle to lock in position.
5. Turn on power to test fixture operation.
6. To adjust color temperature of light, use the 3-cct slider switch on the back of the fixture head to switch between 3000K, 4000K, and 5000K CCT.

FIGURE 1

